



INSTRUCTIONS FOR STROLLERS

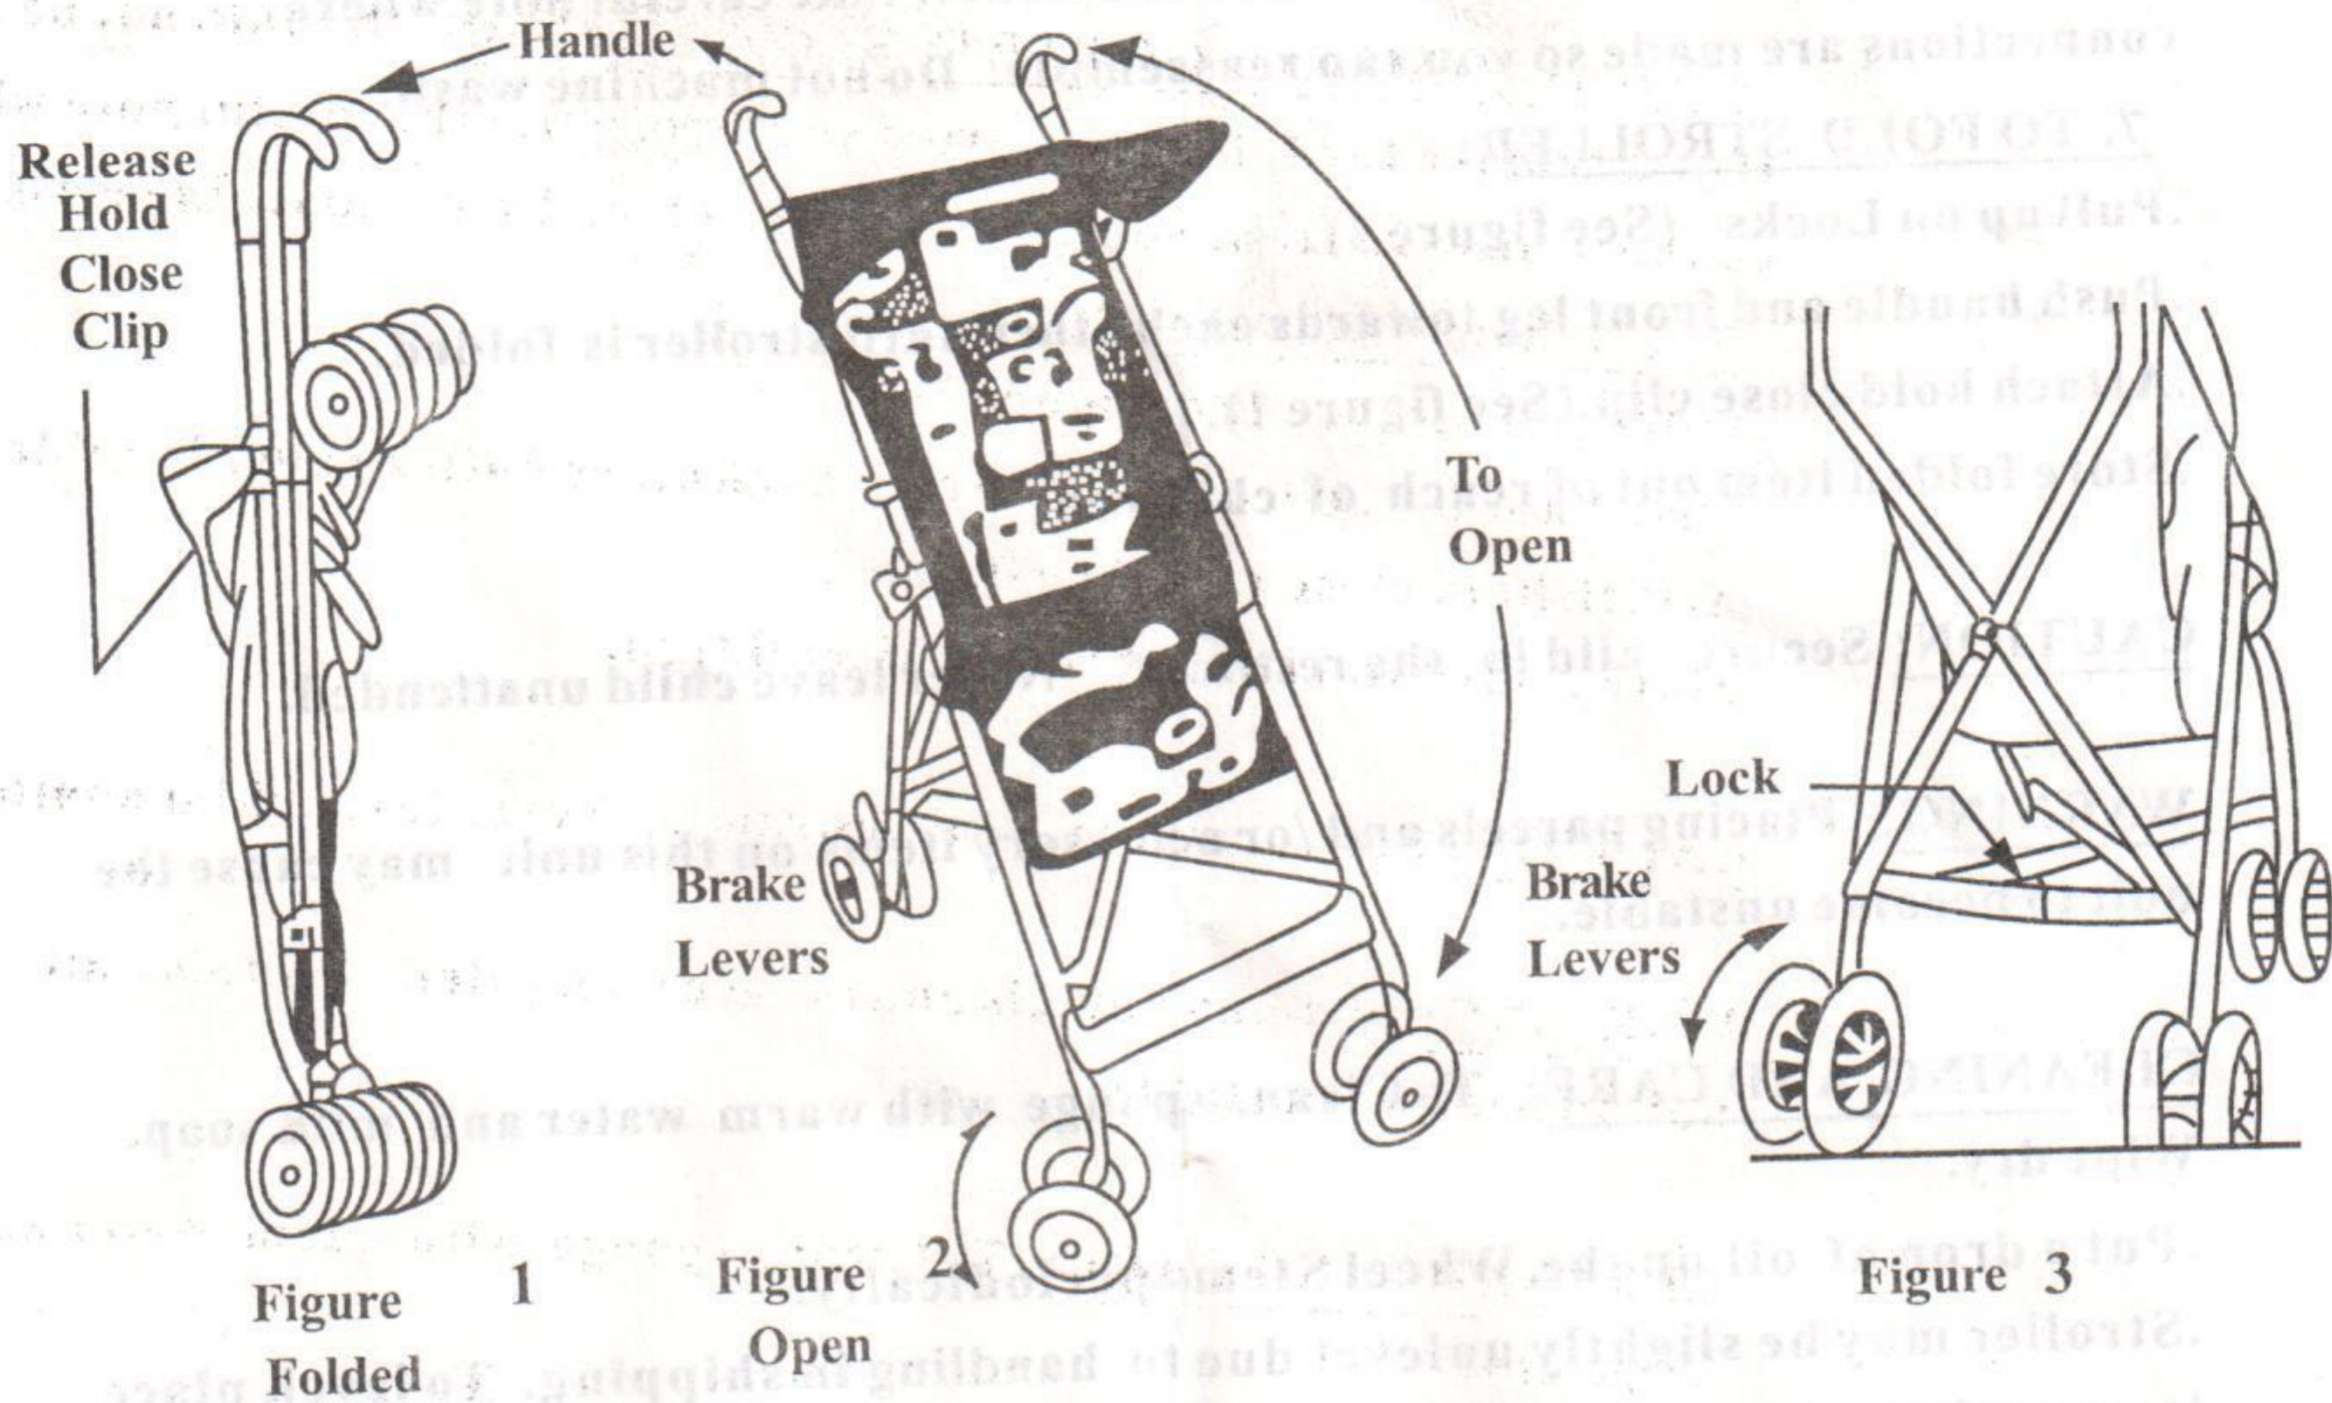

BE SURE YOU FOLLOW THESE INSTRUCTIONS

1. TO OPEN STROLLER: (See figures 1 and 2). Release hold close clip. Spread handle and front leg until open.
2. LOCK STROLLER OPEN: (See figure 3) Push down on locks. Make sure stroller is locked open before using.
3. TO USE CANOPY: (See figure 2). Move canopy from back to front and place in position.
4. BRAKES: Push down on brake levers to apply brakes. Raise to release. Always apply brakes when you are not holding onto stroller.
5. RESTRAINT STRAP: (See illustration for threading.) Place leg strap between child's legs and onto waist restraint. Adjust strap to hold child firmly but comfortably. Make sure the child is securely buckled in before using stroller.

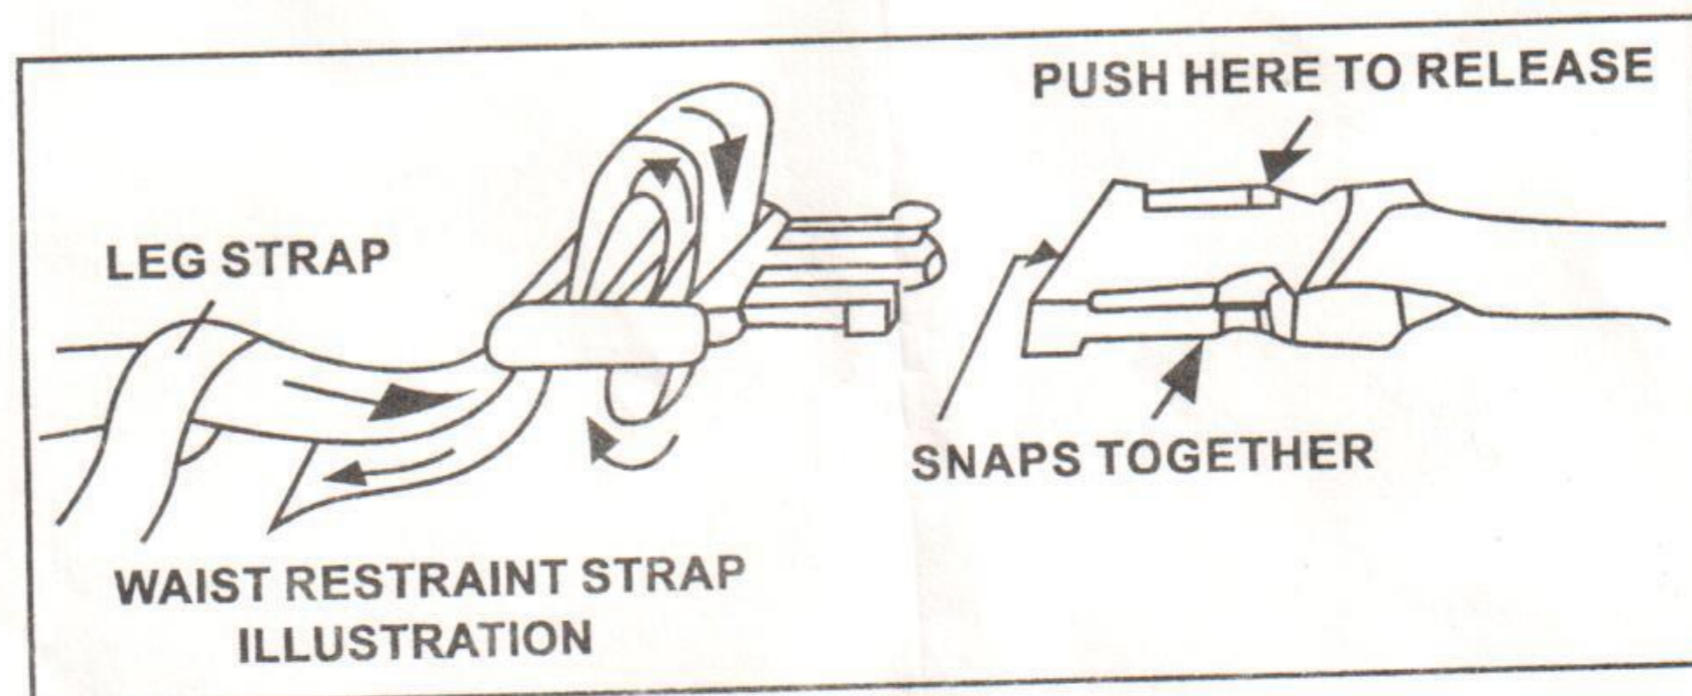

6. REMOVING FABRIC PARTS FROM CHASSIS: (Should not be necessary).

If you remove the fabric seat from your stroller, take careful note where connections are made so you can reassemble. Do not machine wash.

7. TO FOLD STROLLER:

- .Pull up on Locks (See figure 3).
- .Push handle and front leg towards each other until stroller is folded.
- .Attach hold close clip (See figure 1).
- .Store folded item out of reach of children.

CAUTION: Secure child in the restraint. Never leave child unattended.

WARNING: Placing parcels and /or accessory items on this unit may cause the unit to become unstable.

CLEANING AND CARE: To Clean. sponge with warm water and mild soap. Wipe dry.

- .Put a drop of oil on the Wheel Stems periodically.
- .Stroller may be slightly unlevel due to handling in shipping. To level, place it on a table or counter with the leg that does not touch the floor off the edge and gently push down on that leg.
- .Periodically check for loose parts, worn parts, or torn materials. Tighten, repair, or replace as needed.
- .Discontinue using if damaged or broken.

